

OPUS[®]

OP2



PCT Patent Pending GB/2017/050391 &
Australian Patent Pending 2017220045,
2018204104 Design registration No
201714813, 201714812, 201714811, 201714810



**GOOD
DESIGN[®]**
Award



**GERMAN
DESIGN
AWARD
WINNER
2018**

opuscamper.com.au

USER MANUAL



OPUS®

PCT Patent Pending GB/2017/050391 &
Australian Patent Pending 2017220045,
2018204104 Design registration No
201714813, 201714812, 201714811, 201714810

CONTENTS



Vehicle Identification Number (VIN)	page 2
Specifications	Page 3 - 4
Dimensions	Page 5
11 Quick Tips to set up your OPUS®	Page 6 - 7
Hitching & Trailer Electrics	Page 8
OPUS® Brake Set Up	Page 9
Setting Up your OPUS® Camper	Page 10 - 11
Understanding the OPUS® Switchboard	Page 12
Understanding the air valves when setting up your OPUS® Camper	Page 13
OPUS® Water System	Page 14 -15
OPUS® Gas System	Page 16
OPUS® 240 Volt Mains Power	Page 17
OPUS® 12 Volt Power	Page 18
OPUS® Fridge Slide	Page 19
Setting up the Additional Day Bed	Page 20
Installing your OPUS® Annexe	Page 21 - 23
Installing your OPUS® Ensuite	Page 24
OPUS® Care & Maintenance	Page 26 - 30
OPUS® Warranty	Page 31 - 33


PCT Patent Pending GB/2017/050391 & Australian Patent Pending 2017220045, 2018204104 Design registration No 201714813, 201714812, 201714811, 201714810

VEHICLE IDENTIFICATION NUMBER (VIN)



About Your Vehicle Identification Number

Every OPUS® has a Vehicle Identification Number (VIN). The VIN Plate can be found on the exterior of your OPUS® to the left of the door secured, to the draw bar. We recommend making a note of your VIN in the template below. This will be required by insurance companies.

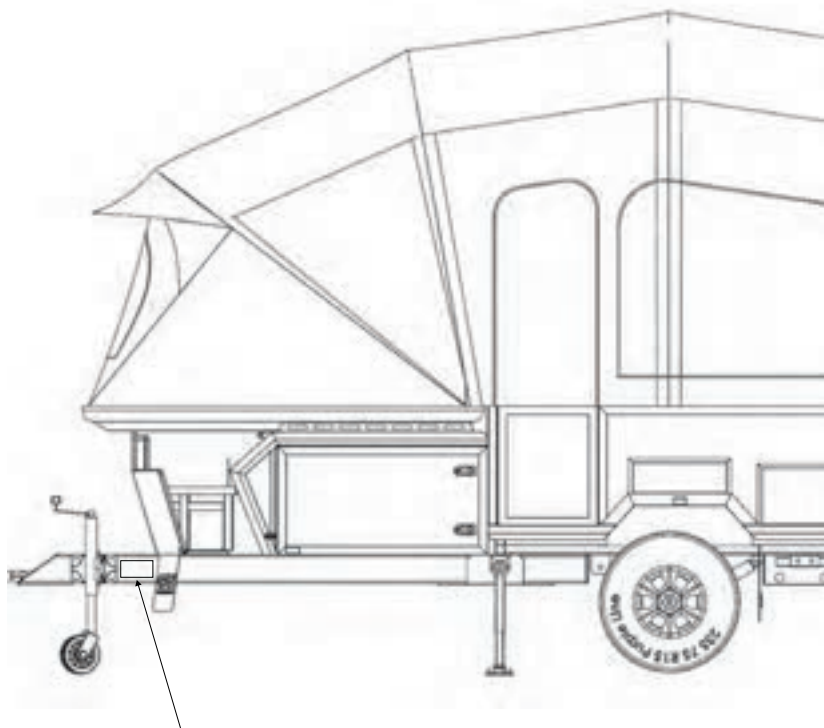

MANUFACTURER: PURPLE LINE PTY LTD		TYRE PRESSURE (COLD): <input type="text"/> kPa	TYRE PRESSURE (COLD) MAX LOAD: <input type="text"/> kPa
TRAILER MODEL: OPUS / PART # <input type="text"/>		SAKE MASS: <input type="text"/> kg	MAXIMUM LOAD: <input type="text"/> kg
DATE OF MANUFACTURE: <input type="text"/>		TYRE SIZE: <input type="text"/>	AXLE LOAD CAPACITY: <input type="text"/> kg
AGGREGATE TRAILER MASS: <input type="text"/> kg	SINGLE TRAILER MASS: <input type="text"/> kg	TYRE LOAD RATING: <input type="text"/> kg	TYRE SPEED RATING: <input type="text"/> km/h
VIN: <input type="text"/>		WHEEL RIM SIZE (PEOPLE'S): <input type="text"/>	The tyres fitted to this vehicle shall have a speed category of least equal to the recommended maximum vehicle operating speed <input type="text"/> km/h
This trailer was manufactured in compliance with the Road Vehicle Standards Act 2010		OPUS® Camper Trailers, 11 Sullis Drive, Koroiteworth, Victoria 3173. For more information contact us on Ph: 03 9588 2008 opusteam@opuscamper.com.au	
		-OPUS® BY THE PEOPLE FOR THE PEOPLE	

SPECIFICATIONS

- 2 SLEEPER



Body Work	Baked enamel finish 2
Box Material	Main body aluminium frame & composite panel exterior, with galvanized steel chassis and draw bar
Ground clearance	490mm
Ride Height	1550mm
Chassis	500 x 1870 x 720mm
Drawbar	2600 x 1390 x 150mm
King Size Bed	1950 x 1600

Features

Coupling	DO35
Suspension	Independent Coil Spring Suspension
Shock Absorber	Quad Shock: Dual Gas Shock Absorber per side
Kitchen	Fully Stainless Steel Kitchen with 4 burner stove & sink with electric tap with slide out extension
Water System	1x Electric water pump
Water Tank	2 x Tanks (1x35L, 1x75L)
Water Tank Guard	Yes
Fridge Tray	1070L x 540W x 500H
Stabiliser Legs	4 x Drop down lockable
Jockey Wheel	Adjustable height swing up
Jerry Can Holders	2 x 20L
Gas Bottle Holders	Twin 4.5kg adjustable gas rings
Stone Guard	Front Surface coated with anti chip deadener
Wheels & Tyres	15" Alloy Wheels 235/75R15 All Terrain Tyres
Spare Wheel	15" Alloy 235/75R15 All Terrain Tyre
Brake System	12" Electric brakes with hand brake and electric break away switch
Lights	LED
Portable Toilet	Standard
External Shower	Cold water supplied from tank

SPECIFICATIONS

- 2 SLEEPER



Electrical

Power Supply	12V & 240V
Anderson Plug for Solar Panels	1x driver side
Battery	2x 100Ah Lithium Battery
Battery Charger	50A AC-DC Charger & 40A DC-DC Charger
Towing Wiring	7 PIN flat plug & Anderson plug
Sound System	JBL Portable Speaker
Power Outlets	12V outlets internal and external

Tent/Canopy




Material	340g Micro Weave Poly Cotton
Tropical Roof	Waterproof and UV Protective Tropical Roof
Annexe	Fully Enclosed Annexe with removable doors & side walls
Ensuite Room	Removable ensuite with floor

Optional Accessories

Awning	Annexe with doors & end walls removed
e-Go Movers	Remote controlled camper movers



DIMENSIONS - 2 SLEEPER

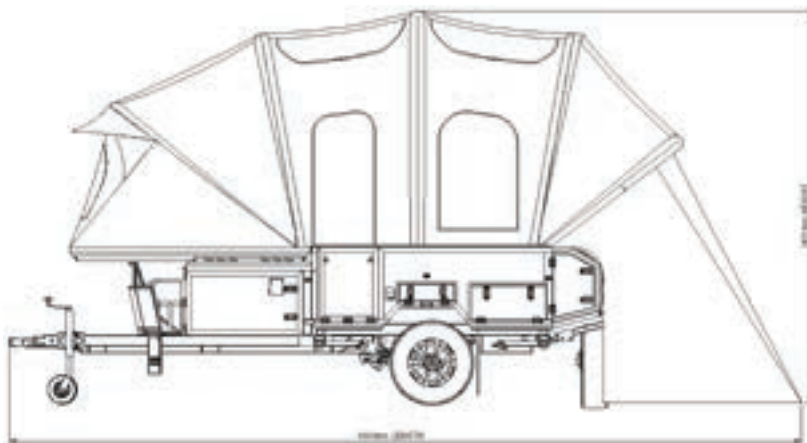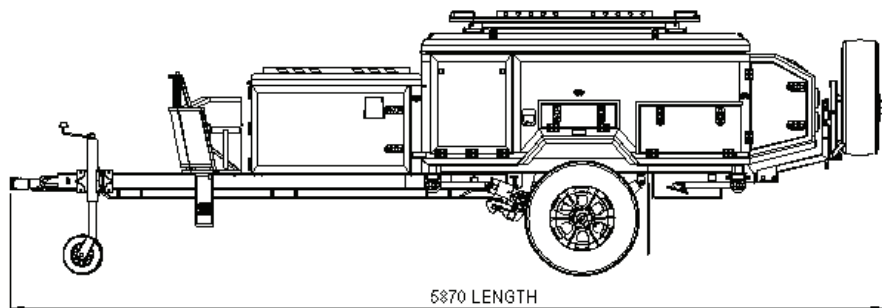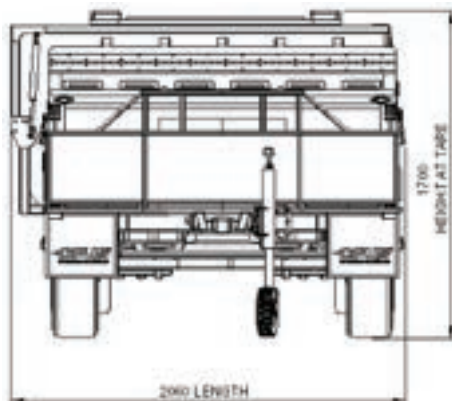

11 QUICK TIPS TO SET UP AND PACK UP YOUR OPUS®



TIP 1

Invest in a cordless drill and 19mm hex head bit to adjust stabiliser legs rather than manually winding them.



TIP 2

To avoid placing too much pressure on the latches and breaking the latch hook, make sure you latch down the back of the camper first (furthest from the hinge).



TIP 3

You can adjust the latch by turning it along the thread, thus extending it to avoid excessive pressure on the latches. You can close your camper with the latches longer, and then return to tighten these up.

TIP 4

When operating the winches ensure that the winch strap remains flat when using or retracting.




TIP 5

Take special care to ensure all canvas is tucked away on all sides especially around gas struts, hinge points.



TIP 6

When using your key to open and unlock the door, push the door inwards on the seal to take pressure off the lock and it will open easier for you.

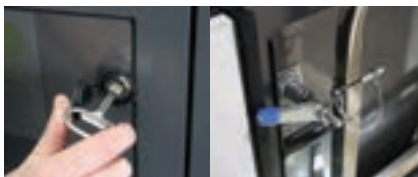

11 QUICK TIPS TO SET UP AND PACK UP YOUR OPUS®



TIP 7

During canopy inflation make sure all external air valves are closed off and the main air valve is open before turning air pump on.



External Inflating / Deflating Air Valve

TIP 8


During annexe inflation make sure the air valves are closed off before turning air pump on BUT MAKE SURE the **cross filling tube valve is OPEN** so that the air from the canopy can purge/travel through to the air beams on to help.



To OPEN valve turn counter clockwise.
To CLOSE valve turn clockwise until firm.

TIP 9


Remember to turn the MAIN INFLATION valve in the camper to the horizontal CLOSED position when inflation is complete otherwise the canopy may slowly deflate over time.

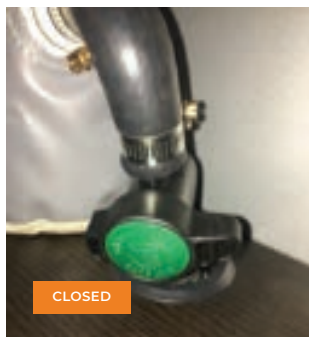

CLOSED

TIP 10

If the beams are losing air slightly you can turn the inbuilt air pump ON and that will top up the air pressure in all air beams back to the desired pressure, the pump will turn OFF automatically.

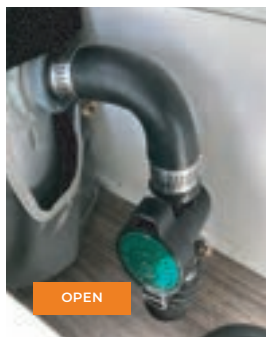

OPEN

TIP 11

Before you set off on your first trip, do a couple of full set ups and while you have all the canopy and annexe up, remember to weather-in the canvas and allow to dry completely before packing up!

IMPORTANT

Remember to open the main valve while inflating.

HITCHING & TRAILER ELECTRICS



About your Coupling

The OPUS® comes with a DO35 off-road coupling.

When hitching the OPUS® to your towing vehicle you must ensure that someone is close to the handbrake in order to maintain control of the trailer, particularly when manoeuvring on uneven ground or a slope.

IMPORTANT

Wheel nuts should be checked after first 100km and then every 1000km.



About your Electrical Plugs

7 PIN FLAT PLUG

The OPUS® is fitted with a 7-pin flat plug that connects all the exterior trailer lighting and the electric brakes to the towing vehicle. A standard 7 pin plug is required on your tow vehicle for this to connect to.


ANDERSON PLUG

The OPUS® is also fitted with two standard Anderson Plugs, one is located at the drawbar connected to the OPUS® batteries via DC-DC charger. If you have an Anderson plug on your towing vehicle that is connected to your vehicle's battery, then you can attach these two together whilst towing.

The second Anderson plug located in the driver side of the camper. You can use this Anderson plug to attach a solar panel which will also charge your OPUS® batteries. Your solar panel must have a built-in regulator. The Anderson Plug runs through its own fused system located in the battery box.

IMPORTANT

Disconnect these plugs when the engine of the towing vehicle is not running, as it will continue to draw current and you may end up with a flat battery on your towing vehicle.

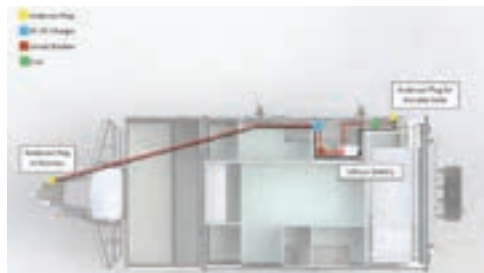

About your Brakes

The OPUS® is fitted with electric trailer brakes. You need an electric brake controller fitted to your car in order to tow the OPUS® and operate the electric brakes safely. Before departing, place car in drive and check that the OPUS® brakes are on. Refer to brake controller user manual for correct adjustment.

BREAK-AWAY SWITCH

Your camper comes with a break-away switch. This is a safety device which will apply the trailer brakes if it becomes disconnected from the tow vehicle.

MAINTENANCE

As part of the annual service check you should have completed by an accredited industry service agent, the brakes should be checked and maintained.



IMPORTANT

The break-away switch is not a security device! When cable is pulled, switch will drain power from batteries

SETTING UP YOUR OPUS® CAMPER



Initial Steps

STEP 1

Once you have positioned & leveled your OPUS® on flat ground (leveling wedges may be required - not supplied), engage the handbrake & disconnect hitch, wiring & chains from tow vehicle.

STEP 2

Raise or lower the jockey wheel to level your OPUS® lengthways.

STEP 3


Using the leg winder supplied, gently lower corner steady legs until each touches the ground with enough pressure to stop any rocking.

STEP 4

If you have a drop down spare wheel set up, please adhere to these safety requirements. Unclip the spare wheel carrier and lower it down gently to the ground, taking care to support the weight of the spare wheel carrier so that it does not swing free and fall.

IMPORTANT

Corner support legs are only to support the OPUS® NOT to be used to level or lift.

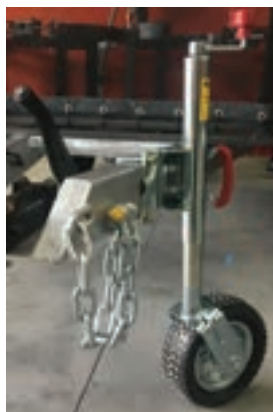

STEP 5

If roof rack is fitted, remove D Clips and unlatch the 2 retaining clips. Once rack is free push up until the gas struts take the weight. From the other side of the camper pull roof rack into vertical position and secure upright with D clips through mounting point.



SETTING UP YOUR OPUS® CAMPER



Initial Steps

STEP 6

Unlatch the lid starting at the rear of the camper. Lift the lid 20cm.



STEP 7

Unwind the front winch until the strap is long enough to reach the back of the camper. Clamp the winch onto the rear eyelet mounted on the back of the lid. Unwind the rear supporting winch and clip on with enough slack to allow the lid to rise to vertical.



IMPORTANT

Take care not to stand underneath the lid as it comes down.
Ensure lid is lowered slowly & does not drop suddenly.

STEP 8

Ensuring that the strap remains flat and tensioned, slowly wind the winch in to bring the lid up and over the camper. The gas struts will take the weight of the lid.

STEP 9

Once lid is fully open and resting against stone guard secure in place using latch provided

STEP 10

At this stage walk around the OPUS® and inspect the tent to ensure that the canvas is properly located within the aluminium channels and that no part of the tent is caught or snagged.

STEP 11

At front of camper fit each corner of the canvas over the corner of the lid. The seam on the canvas should line up with each corner of the bed lid. Secure using straps provided.

STEP 12

Ensure the main internal air valve is open (vertical/inline). Tighten all external air valves on each air beam (5 on tent and 7 on annexe).

STEP 13

Turn the power key ON. Turn the pump master switch ON. Push the pump button and watch your camper inflate!

STEP 14

CLOSE the main internal valve to lock off air system. You may also wish to close your cross linking valves to retain constant pressure over an extended stay.



REPEAT STEPS 1-12 IN REVERSE TO PACK AWAY. REMEMBER TO ZIP UP YOUR DOORS AND WINDOWS & OPEN MAIN VALVE BEFORE DEFLATING CAMPER.

SETTING UP YOUR OPUS CAMPER

Main features of your switchboard

1. Main Power Button Switch
2. Away Switch
3. 12 Volt Sockets
4. Lighting
5. Water Pump
6. Inverter On/Off Switch
7. Water Tank Indicators
8. Air Inflation
9. Battery Level Indicator
10. Key Hooks



Quick steps to turn Air pump on for inflation

STEP 1 Turn main power button switch ON

STEP 2 PRESS air inflation button ON and release, then pump will turn off automatically once at desired pressure.

Quick steps to check battery level

STEP 1 Turn on main power switch


STEP 2 Look at digital volt gauge

STEP 3 Look at battery level indicator

UNDERSTANDING THE AIR VALVES WHEN SETTING UP YOUR OPUS® CAMPER



- 1** Check all 5 outside valves are closed.

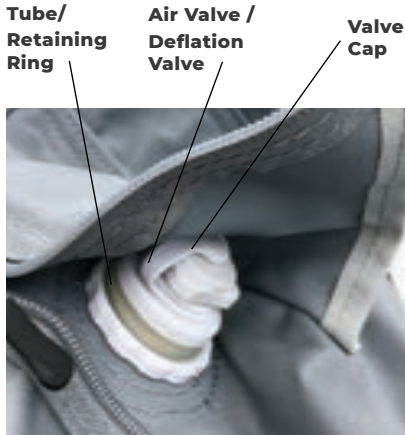

- 3** Open switch board, turn on main 12v power key, switch then press the air pump button



IMPORTANT

Failure to CLOSE the Main inflation valve switch after inflation will cause the Annexe and Canopy to slowly deflate.

- 2** When inflating turn the Main Inflation valve switch (inside camper) to a Vertical OPEN position by rotating anticlockwise.



OPEN (vertical/in line)

- 4** Once inflation is complete turn the Main Inflation valve switch (inside camper) to a Horizontal CLOSED position by rotating clockwise.



CLOSED (perpendicular)

Water System Set up

The OPUS OP2 is fitted with 1x 75L + 1x 35L fresh water tanks. With one mounted in front of the axle and the other unit mounted behind the axle. Each water tank has its own lockable fill point located on the driver side of the body of the Air OPUS® and is plumbed to a 12V switchable water pump located on the circuit board.



The two tanks are both plumbed to the same water pump via a 3-way valve located next to the water fittings on the drivers side. This valve is used to switch between the two tanks or to draw from both equally.

The plumbing system is connected to the kitchen, the shower and the outlet on the drivers side. The shower and kitchen are permanently connected to the plumbing system. The kitchen connection includes a flexible cable drag chain to allow the kitchen to slide in and out. The drivers side outlet can be used to plumb into an external hot water service which is plumbed back into the adjacent inlet supplying hot water to both the kitchen and shower.

- Red plugs / dust caps must be removed before turning pumps on.

OPUS® WATER SYSTEM



The kitchen has a drain hose attached to the sink drain. This is designed to drain cold water to a waste container/bucket. As the Air OPUS® is a cold-water unit.

The water pumps are pressure operated, so once the main 12 Volt power switch is turned on at the circuit board, the pump will prime the system and as soon as you turn the tap on the water will flow. Once the tap is closed the pump will turn off until the tap is turned back on.


When the water system is not required Air OPUS® recommends switching off the pump when not in use.

When packing away the Air OPUS® follow the procedure below to drain the system of any excess water before disconnecting the water inlet and internal waste pipe:

- A. Switch off the pump at the mains power switch.
- B. Open the tap & allow the excess water in the pipe to drain.
- C. Close the tap once all the water has drained.
- D. Disconnect either side of the male-to-male hose coupler.
- E. Place the bottom wastewater outlet pipe away under sink.

IMPORTANT

A SMALL AMOUNT OF WATER MAY BE PRESENT FROM THE CONNECTORS AND WASTE HOSE, SO A CLOTH IS USEFUL TO REMOVE ANY EXCESS WATER.

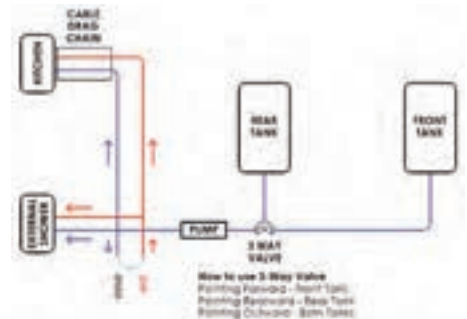

Safe operating procedures for your gas system

PLEASE refer to the information located on the rear of your OPUS® gas certificate.

STEP 1

The OPUS® is fitted with rings for two 4.5kg gas bottles. One bottle at a time can be connected via the gas regulator provided and must be turned off when the gas is not in use.

IMPORTANT

CHECK THE INSTRUCTIONS FOR CORRECT FITMENT AND SAFE USE WITH THE GAS CYLINDER MANUFACTURER/SUPPLIER.

STEP 2

To install a gas cylinder, ensure the gas cylinder is placed correctly with J-clamp, attach the threaded gas line to the bottle ensuring that's its been tightened so no leaks occur. It is advisable to keep an adjustable spanner with jaw opening up to 30mm for this use.

STEP 3

Once kitchen has been pulled out all the way you can fit the gas bayonet hose to the bayonet. This is a simple push and twist to install.

STEP 4

The gas tap/valve on the top of the gas bottle can now be opened. Allow 5 minutes for gas to plumb through.

STEP 5

Turn on the yellow gas tap (situated underneath the rear of the OPUS behind each of the gas outlets unit) by turning 90° until it's in -line with the gas hose.

STEP 6

Lift up lid of the gas hob, turn on one of the burners (push in, hold the knob down until flame is lit and stays on. Keep pressing the button until the gas has had time to fill up the system and the burner will ignite.

STEP 7

Switch off the yellow gas valve when not in use and ensure that the gas bottle valve is closed prior to packing up the OPUS® for transit or storage.

When Annexe is being used, ensure sure both ventilation points are clear and not covered, one on the drop skirt and the other on the roof of the rear pod. Leave the privacy screen behind your kitchen OPEN.

Gas fumes inside a camper trailer tent could result in unconsciousness, brain damage or even death. Follow safe operating procedures with gas at all times:

- Ensure good ventilation throughout, at ALL times
- Do not use any other gas systems than those provided with the OPUS® camper inside the tent
- Always turn off the shut off valve IMMEDIATELY after use.

TIP - If your igniter on your stove is not clicking, check your D battery hasn't dislodged. You can do this by removing your cutlery drawer, and the D battery is tucked under the front of the stove top beneath the bottom right burner. This battery may lose contact or become dislodged during transit.

240V - Safe operating procedures

The OPUS® comes fitted with a 240 volt power system. This 240 volt power system complies with Australian Safety Standard AS3001.

The main circuit breaker and RCD is located with the main 15Amp power input on the driver's side of the OPUS®

The external power point is located on the passenger side of the OPUS® in front of the wheel arch.

12 Volt - Safe operating procedures

The OPUS® has many 12V outlets - they are a combination of standard 12V sockets, 12V light sockets, USB sockets and switches. These are located throughout your camper trailer both internally and externally.

Next to the main door you will find your light switch and dimmers for internal and external fixed body lighting. The dimmers will only operate the build-in lighting and will not influence any other lighting you run via sockets.

The OPUS OP2 is fitted with the Renogy One Core Battery Management System which provides an indication of the remaining charge as a % and hours remaining on the digital display. You can also use the screen to see real time amp draw as well as water tank levels and to level your camper

All switches have their own resettable fuse next to each of the switches in addition to a master resettable circuit breaker for the whole 12V system located next to these controls. Your batteries are also fused - in the battery compartment the large resettable fuse is wired to the 50amp Anderson plug fitted at the draw bar.

All sockets, fridge power and lighting will operate on 12V power from the on board batteries; heavy usage and power hungry appliances will deplete the battery's charge. It is recommended to have the mains 240V connected to a suitable supply if available, even if appliances are run on 12V only, to ensure your batteries remain topped up.

The battery charger is fully automatic and will recharge the batteries if the OPUS® is connected to a 240V electric power supply via the 15amp power inlet.

Do not unplug or disconnect this charger internally as it may lose memory settings for your battery set up and affect your charging. This is an automatic cycle charger and if using, allow enough time for the charger to complete a full charge cycle.

Refer to your battery charger instruction manual for further details.

TIP -Monitor your batteries closely! Charge or discharge the battery to approximately 50% of capacity before storage. Charge the battery to approximately 50% of capacity at least once every six months.

TOWING WIRING

The trailer lights and electric brakes are wired to a standard 7 pin trailer plug. The OPUS® is fitted with electric brakes. While in transit if the tow vehicle has the Anderson Plug connected this will also be topping up the batteries.

IMPORTANT

Your towing vehicle must have an in-car electric brake controller installed or your warranty will be voided.

Your OPUS® is supplied with a powered fridge slide to mount your 12V travel fridge.

LIGHT

The fridge drawer has a sensor-activated light inside for ease of use at night time. This light will only run if the "Light" master switch on your panel is on. The sensor must be activated by a change from light to dark to detect and switch on.

POWER

A 12V socket is supplied at the side of the fridge slide to run your fridge. This outlet is run off the "Fridge" master switch on your switch panel.

IMPORTANT

Be careful not to catch or crush your fridge's power cable in the slide mechanism

FAN

Your opening door is also fitted with a small fan. The switch for this fan is located next to the 12V fridge socket. You do not have to run this fan, however it is recommended for hot days and long trips to prevent overheating your fridge.

TIP - If you wish to travel with your fridge powered and fan running, you must leave the red power key in and switched on, and the LIGHT and FRIDGE switches activated.

SETTING UP THE ADDITIONAL DAY BED



Seating moved to create additional bed

The seating area inside the OPUS® can be reconfigured as shown.

Seating configuration



Additional bed configuration



INSTALLING YOUR OPUS® ANNEXE



Attaching annexe to canopy

STEP 1 To attach the annexe to the canopy of the camper deflate the canopy to attain easy access to zip area (see picture as shown).



STEP 2A

Zip on annexe roof as shown, attach left and right buckles at either bed end and velcro down straps.

Then connect left and right corners of the annexe to the corners of the OPUS camper.



STEP 2B

Connect roof air inflation point to the Opus tent.

INSTALLING YOUR OPUS® ANNEXE



STEP 3 Spread annexe canvas out from the camper as shown



Inflating the annexe when attached to canopy

STEP 4 Make sure the 5 valves on the Opus camper tent are closed and inflate the main tent whilst the annexe attached.



STEP 5 Before inflating the annexe make sure all 7 outer valves on the annexe are closed.

STEP 6 With the cross connecting tube attached, you can open both valves, one from tent and the other on annexe. This will then start to fill the annexe turn air pump on and it will automatically turn off.

STEP 7 Turn inbuilt pump on to start annexe inflation. Keep an eye out for obstructions and when the annexe starting to form, feel free to help guide the air beams to assist in easy flow of the air through them and form final annexe structure.



Inflating the annexe when attached to canopy continued...

- STEP 8** After main pump shuts off it has reached the desired pressure. Remember to turn the main inflation valve in the camper to the horizontal CLOSED position when inflation is complete. If planning a long stay, close cross linking tubes on annexe and tent to retain pressure, including the cross filling tube. Remember to reopen prior to Deflation!
- STEP 9** Using the black straps provided set the feet of the annexe at 2.4M out from the side of the camper and tension. Ensure all feet are sitting on their protective canvas bases. Peg feet into ground if weather suggests.
- STEP 10** Attach all velcro seals between canopy and annexe to shut out wind and seal room. Zip draft skirt into zipper along side of camper.





Attaching annexe to canopy

- 1** Using the toggle provided, zip the ensuite top onto the end air beam over your spare wheel.
- 2** Peg down each corner/base to tension the room.
- 3** You may also wish to use the guide ropes provided to retain the shape of the room.

IMPORTANT

Remove the ensuite every pack down to prevent any moisture being trapped inside the camper.

INSTALLING YOUR OPUS® ANNEXE



Changing a faulty bladder when product is not inflated/in use

- STEP 1** Locate the faulty air beam and check that all valves are closed on the beam.
- STEP 2** Remove linking air tube from faulty beam.
- STEP 3** Unzip the outer retaining sleeve to reveal the grey beam tube.
- STEP 4** Undo the ties holding the zips on the grey tube together and unfasten the zip. **While unzipping or zipping be careful NOT to allow the zipper to pinch the air tube.**
- STEP 5** Remove the bladder from the structural tube as shown. Reinflate the bladder and locate the puncture. Using the repair kit provided, patch the hole and let dry. Test the puncture is sealed by reinflating using the hand pump supplied.

DO NOT OVER INFLATE. If the bladder can not be repaired please contact the dealer.



IMPORTANT

DO NOT CHANGE OR UNZIP BLADDERS WHEN CAMPER IS INFLATED. ISOLATE BEAM & DEFLATE BEFORE BEGINNING



STEP 7

Reattach the crosslinking tie to the repaired beam. This is a firm fit - ensure it is pushed on ALL the way and sitting flush before reopening valve.

STEP 8

Reopen the crosslinking valves to allow air to equalise. To repressurise the camper, open your main valve and reactivate pump - this will shut off again once the cabin reaches pressure. Relock your crosslinking valves again once done to retain pressure.

- STEP 6** Once successfully repaired, reverse above steps.

IMPORTANT

Ensure zip doesn't pinch bladder! Zip beam back in straight and aligned to the holes in the tube. If a replacement air beam is fitted and the length exceeds the

IMPORTANT THE OPUS® CAMPER MUST NOT BE STORED WET/DAMP

STORAGE

Pack down the camper correctly as per procedure outlined. Make sure that you pack down your OPUS® tent and annexe when the canvas is completely dry BEFORE being stored. If taken down wet, dry completely at the first opportunity to avoid damage to the tent or annexe - this MUST be done within the next 24 hours.

It is strongly advised that you purchase a storage cover for your OPUS® if it is to be stored in an uncovered location. A storage cover is advised if your camper is left exposed to the elements.

Clean off dirt, tree sap, bird & bad droppings and grime on the unit from travelling/ terrain to keep your camper in good condition and maximise its longevity. Failure to do this may permanently mark or stain your composite panelling.

Empty the water tanks prior to storing. Ensure this is done from drain points and not by running the pump.

RETURN TO THE ROAD

Ensure that your camper and accessories are fit for the road and you adhere to all local laws.

Check the wheels and tyres and ensure they are in good condition with the wheel nuts correctly torqued (125NM).

Check the tyre pressure before driving (45PSI when cold).

Check that DO35 is functioning properly.

Check the lights and fittings and ensure they are functioning correctly.

The chassis/running gear and the gas installation of your OPUS® camper should be checked on an annual basis by a qualified service centre.

CARING FOR YOUR CANVAS

In order for the OPUS® to give you years of camping pleasure, the tent and annexe need to be cared for and MUST NOT be left wet/damp when packed away. If it is unavoidable that you will have to pack down your OPUS® when the canvas is wet, it is very important that the OPUS® tent, annexe and ensuite room are dried in the sun as soon as possible - this should be done within 24 hours.

All OPUS® tents and annexes must be “weathered” before use. To do this you will need to thoroughly saturate the canvas by hosing it down with water and then allow it to dry prior to its first use. It is possible, due to the nature of the canvas that there may be a small amount of water ingress during the first few uses in wet weather; this is normal as the tent and the annexe go through ‘weathering’ or ‘conditioning’. If this persists, please notify us as soon as possible.

MAINTENANCE TIPS

- Allow condensation to clear and dry before packing/storing the camper.
- Regularly check the seams of the tent and annexe and if required apply seam sealer or suitable alternative. Follow the product instructions and allow to fully dry before packing.
- Regularly check the velcro straps and seams
- Never force the zips of the tent or annexe to open or close; inspect for any issues and rectify as necessary.
- Ensure the zips are used and cared for properly, if needed a zip lubricant can be used to allow for smooth operation.
- Regularly inspect the tent and annexe for holes, rips/tears and damages and have a suitable tent repair kit for use in emergencies.
- Ensure doors and windows are closed before deflation and reinflation
- Ensure your main inflation valve and all cross linking valves are OPEN before packing away
- Take care when setting up and packing down the camper to ensure the tent, and the annexe beading is not caught or snagged, should this occur retrace the steps and retry making sure the issue is rectified.
- Should a rip/tear occur assess the damage before taking action. If unsure contact your OPUS Camper dealer. Small rips/tears can be repaired using the appropriate repair kit and procedure and may not require a professional or return to the dealer or us for repair; should the damage be significant or exceed your capacity, please contact your OPUS dealer or us.

EXTERNAL CARE FOR YOUR OPUS®

- Inspect the outside panels of your OPUS® including the roof (bed lids) for any damage or cracks.
- Inspect the sealant around the panels to verify that there is adequate bonding around the body panels and exterior features such as the front storage box/fridge cabinet. This is especially important after an impact/accident to the camper to ensure the integrity of the body's resistance to water ingress.
- Regularly check the seals (centre and perimeter) of the camper, to ensure there has been no damage. Ensure your OPUS® is packed properly to seal the camper and prevent water ingress.

Keep the body and the roof of the camper clean, it is best to clean any mud and dirt off the camper

- immediately or after every journey to maintain its clean finish. Prolonged exposure to UV, mud, dirt and salt may deteriorate the finish of the camper. The body of the camper can be washed with soap and water using a soft sponge. Rinse the camper thoroughly after washing.

A damp cloth may be preferred especially for small spots and dirt.

- Specialist products such as Care-avan Waterless Wash & Shine may be used where/ when adequate water is not readily available. Read and follow the instructions carefully and it is advisable to try any product to be used on the camper on a small inconspicuous spot to ensure/verify it is suitable before full use.

Any form of damage or scratch to the paint work or finish of the camper on the body may be

- repaired or cleaned by using a suitable 'touch up' stick/paint.

Contact your dealer or OPUS® camper directly for further information.

CONDENSATION

Condensation needs to be considered in both the OPUS® camper tent and the annexe.

Condensation is caused by warm, moist air coming into contact with cold surfaces. This can occur inside most tents and annexes, which may sometimes be misinterpreted as the fabric leaking.

There is always moisture in the air when you pitch a waterproof fabric above damp ground; however the situation is made worse by adding people who are breathing out warm water vapour. When the warm moist air inside comes into contact with the fabric of the OPUS® camper tent or the annexe material, which is cooled by the outside air, condensation forms.

While the OPUS® is stored away condensation may occur we highly recommend you open the OPUS® on a monthly basis for long term care of the canvas.

During rain more condensation can form due to lower outside temperature and drops can form and run down seams or fall on internal poles, giving the appearance of a leak.

There are a few main causes of condensation:

- Ground moisture rising inside your annexe.
- Your breath - when sleeping at night you will exhale approximately 1 litre of water. This water vapour is trapped within your OPUS® or annexe - this will escape through opening windows, doors or vents.
- Storing damp or wet accessories e.g. floor mats, chairs, clothes etc.
- Cooking by gas - 0.5 hours of cooking can produce 0.5 litres of water.

It is natural for the body to perspire (sweat) during the night; please ensure the camper is WELL VENTILATED to avoid excessive condensation which could result in issues such as mould or damp if adequate care is not taken.

After a night's sleep please INSPECT the mattress to ensure no condensation is present and the mattress is properly aired.

If in storage for a long period of time such as 4 weeks or longer, its recommended to open and let it breathe for 24 hours. If the OPUS® is based in tropical warm areas eg. NSW, QLD, NT etc. will cause condensation when closed & may need to be opened & aired more regularly.

VENTILATION

Ventilation is more important than is generally realised - your OPUS® camper and annexe have several windows/vents that can be opened to help increase air ventilation. An increase in ventilation will result in a decrease of condensation. Under extreme conditions, condensation cannot be completely avoided.

Condensation nearly always occurs on the roof poles and therefore it is often confused with leaks.

Leave the ventilation panels open as much as possible. To prevent ground moisture rising inside the awning, a plastic underlay can be placed underneath, but this will cause the grass to die and may contravene some caravan/camp site rules.

When cooking in the OPUS® Annexe it is crucial to ensure the ventilation vents located above and below kitchen slide out are clear and not covered.



IMPORTANT

WHEN COOKING DO NOT HAVE THE ROOM DIVIDER CLOSED BEHIND KITCHEN SLIDE OUT. IT MUST BE OPEN.

WARNING This vent must remain permanently open, clean and unrestricted to provide ventilation when gas appliances are in use.



Thank you from...






FLAMMABLE

**WARNING: UNZIP BOTH DOOR SECTIONS
WHEN VENT OR FLUE IS LOCATED INSIDE ANNEXE.**

FAILURE TO DO SO MAY RESULT IN DEATH

This will ensure ventilation for gas & carbon monoxide required
by Australian/New Zealand Standard: AS/NZS5601.2:2013



GAS WARNING

INTRODUCTION

The following information relates to warranties offered by OPUS. Please read all the information carefully, and should you have any questions relating to any aspect of this section, please contact OPUS. By purchasing an item from OPUS, you hereby agree to all terms and conditions of warranty as set out herein.

OPUS will always deal with warranty claims reasonably and in good faith. We offer a 12 month warranty on all fittings and fixtures, plus the following specific warranties:

- 5 Year Suspension Warranty
- 3 Year Canvas & Tent Warranty
- 5 Year Structural Warranty



OPUS warranties apply for the use of your OPUS on any road or track that is trafficable to normal four-wheel-drive vehicles.

VALIDITY OF CLAIMS

- Warranties are valid to the original purchaser of the item in question and apply from the original date of purchase.
- Warranties apply to items sold as “new” and do not extend to items sold via auction, or deemed to be “factory seconds”, “ex-demonstration” or “damaged” unless specifically stated otherwise by OPUS in writing. (See details later in this document.)
- Warranties are not transferable. Also, if the original purchaser sells an item to a third party, the original purchaser cannot make any claims on behalf of the new owner.
- Warranties do not apply to products used in hire schemes or as rentals.
- OPUS does not cover damage due to unauthorised modifications, misuse, abuse, incorrect assembly, improper and irregular maintenance, or accident or collision.
- Any work performed under an authorised warranty claim approved by OPUS must be performed by OPUS, or an authorised representative of OPUS, and only with the express written permission of OPUS.
- Affiliates, representatives, associates, agents, suppliers, resellers or similar of OPUS shall have no authority to authorise or deny warranty claims on behalf of OPUS.
- OPUS shall not be liable (in part or whole) for any warranties, either express or implied, made by agents or resellers on behalf of OPUS without the knowledge or express written permission of OPUS. Such unauthorised claims shall be the responsibility of the agent or reseller only.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

OPUS Campers are designed for use on any road or track that is trafficable to normal four-wheel-drive vehicles.

OPUS Campers can be exposed to water crossings where the water is below body floor level, but never where the water is at, or above, body floor level.

The following items are not covered under the OPUS warranty:

- Impact or stone damage to body, chassis or running gear.
- Soiling of fabrics and internal fitments from dust and other airborne substances.
- Water damage due to water crossings.
- Movement or damage caused by dislodgment of appliances and fittings resulting from hard impact or heavy landings or severely rutted roads or tracks.
- General damage arising from misuse.
 - Rust
 - Wheels and Tyres
 - Paint
- Faults to canvas when stored wet.
 - Mould
- General consumables such as bearings, light fittings, batteries etc.
- Wear and tear when the trailer is used for permanent living purposes

OPUS includes equipment and fittings, such as audio equipment and pumps, which are warranted separately by their manufacturer and not covered by the OPUS Warranty. If necessary, OPUS will help an owner make a warranty claim to these manufacturers.

In addition to the express OPUS warranty, the consumer may also be covered by other rights and remedies of the Australian Consumer Law in relation to the goods and or services to which this warranty relates.

TENTS

Tents are guaranteed to be in new merchantable condition at the time of purchase. A limited manufacturer's warranty period of 3 Years applies to OPUS canvas components, poles and fittings, air beams and valves. General wear and tear excepted. Zips and mesh or screens are not covered.

FACTORY SECONDS, EX-DEMONSTRATION & DAMAGED GOODS

From time to time, OPUS may offer for sale items deemed to be "factory seconds", "ex-demonstration", or "damaged". Any such items are sold on an "as is" basis.

There are no warranties, refunds, credits, exchanges or similar associated with such items. In the sale of such items, OPUS will attempt to provide all relevant information regarding the item, including faults, defects, or similar, however, there may be instances where minor defects or imperfections have been overlooked. This is purely unintentional and in no way alters the nature of the sale.

Due to the nature of such items, being "ex-demonstration", "factory seconds" or "damaged", it is reasonable to expect that some imperfections or flaws may exist even where it is not initially apparent. By purchasing such an item, you agree to this statement and accept that there are no warranties implied or expressed

LODGING A CLAIM

All warranty claims should be lodged by contacting your dealer directly.

CONTACT

If you have any further questions relating to warranties, or are unsure about any aspect of this section, please contact OPUS.

Phone: (03) 9588 2959

Email: enquiries@opuscamper.com.au

Head to www.opuscamper.com.au/warranty for more information

OPUS® Service Schedule



SERVICE INTERVAL	1000 KM / 3 MONTHS	10000 KM / 1 YEAR	20000 KM / 2 YEARS	30000 KM / 3 YEARS	40000 KM / 4 YEARS	50000 KM / 5 YEARS
Check coupling moves freely and is lubricated						
Torque coupling bolts						
Check safety chain and drawbar for rust						
Check jockey wheel rotates, lifts and spins freely						
Test handbrake						
Check tyre wear and age (replace if over 6 years old)						
Check tyre alignment (2-3mm toe in, 0-0.5° camber)						
Check tyre inflation pressure						
Check bearings for play and wear. Repack bearings with grease						
Grease suspension swing-arms						
Check suspension straps						
Torque suspension bolts						
Check and adjust brakes						
Torque wheel nuts						

S
T
A
M
P

H
E
R
E

OPUS® Bolt Torque Guide



LOCATION	BOLT SIZE	BOLT GRADE	TORQUE
Coupling	12 mm	8.8	80 Nm
Hand Brake	12 mm	8.8	80 Nm
Jockey Wheel	12 mm	8.8	80 Nm
Stone Shield	10 mm	8.8	22 Nm
Tool Box	10 mm	8.8	22 Nm
Drop-down Legs	10 mm	8.8	22 Nm
Suspension pivot	14 mm	8.8	70 Nm
Bump stops	8 mm	8.8	22 Nm
Suspension limit straps	12 mm	8.8	55 Nm
Shockers	14 mm	8.8	80 Nm
Rear bar mounts	14 mm	8.8	105 Nm
Rear bar pinch bolts	8 mm	8.8	22 Nm
Wheel nuts			125 Nm

**FOLLOW US ON FACEBOOK AND
INSTAGRAM TO SEE WHAT WE'RE UP TO!**



A horizontal rectangular banner with a textured orange-to-red gradient background. The word "WARRANTY" is written in the center in a bold, white, sans-serif font.

WARRANTY

5 year structural, 5 year suspension, 3 year canvas and air tent, plus 12 months on fittings and fixtures. OPUS® warranties apply for the use of your OPUS® on any road or track that is trafficable to normal four-wheel-drive vehicles. Register your OPUS® warranty at our website www.opuscamper.com.au/warranty/

PCT Patent Pending GB/2017/050391 &
Australian Patent Pending 2017220045,
2018204104 Design registration No
201714813, 201714812, 201714811, 201714810

For further information please
contact the OPUS® team

03 9588 2959

enquiries@opuscamper.com.au

Find us on Facebook Instagram & Youtube



◀ OPUS®

opuscamper.com.au

Share your feedback



Photographs and diagrams are for illustration purposes only. Actual product may vary
and any specifications are subject to change without prior notice.
All information correct at time of print. © Purple Line Pty Ltd 2021.
Issue No: 05042019